


General Hub Breakdown Layout

Detailed diagrams of the swivel seals & hub for your Toyota 4x4.

The swivel hub housings are prone to leaking oil, this usually ends up with oil on the wheel & tyre which is a very common MOT failure.

By using the diagrams below you can rest assured to ensure a complete and thorough repair of both front swivels & hubs using the best parts available from RoughTrax.

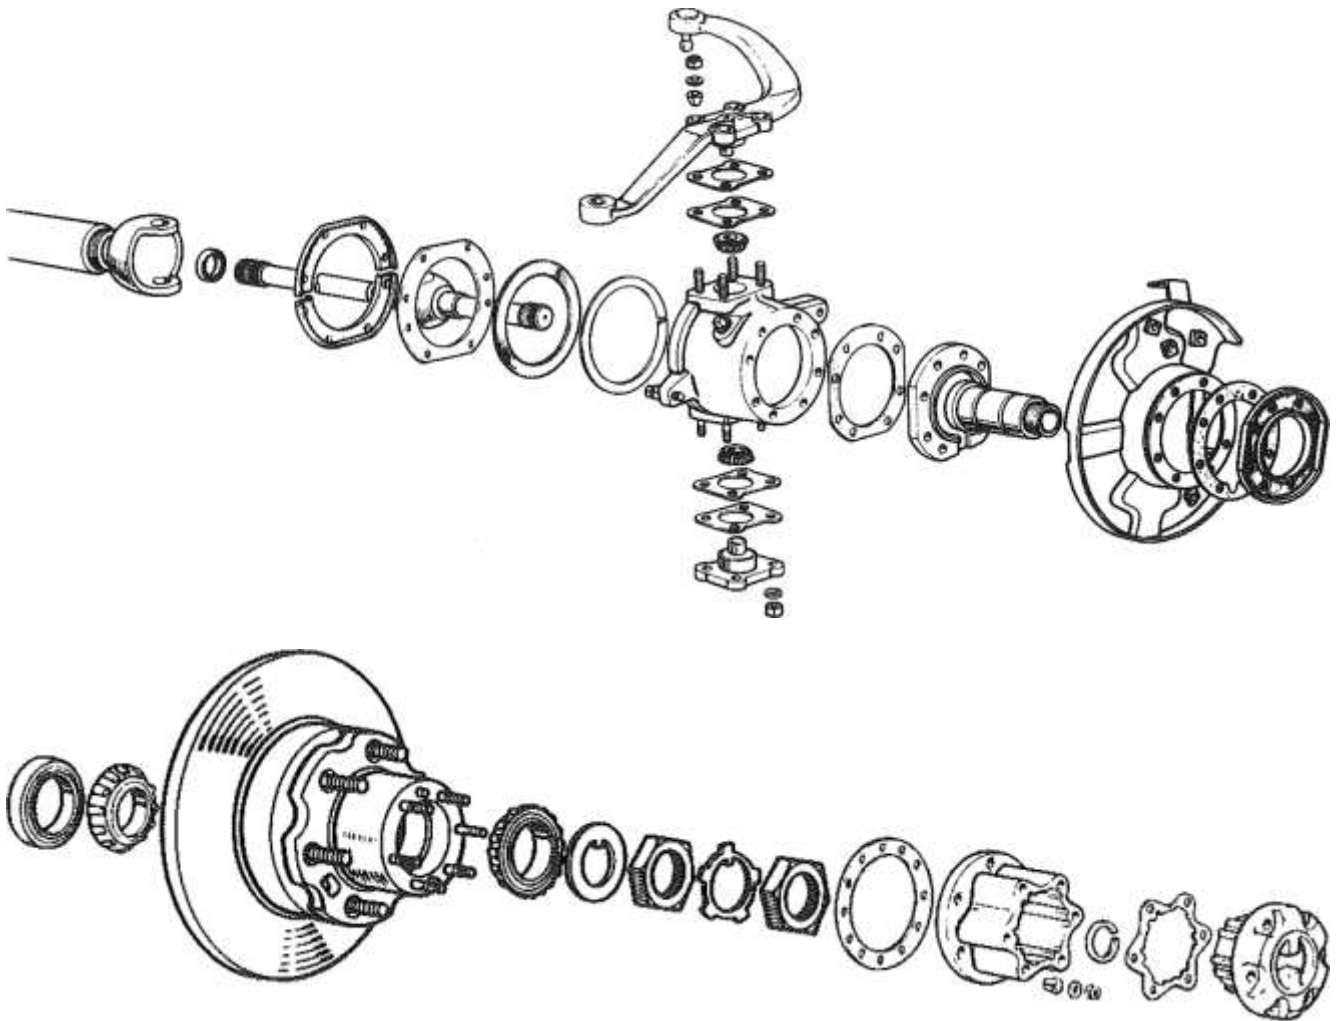

Please Note. To remove the hub stud and cone washers use a tapered punch or aluminium or brass drift on the end of the studs, the cone washers will release on impact.

All 6 cone washers must be removed before the hub can be removed, WD40 helps with this process.